

Original	Replacement	Original	Replacement
Power		Power	
Mute		Mute	
CD Play/Pause		Play	
CD Play/Pause		Pause	
CD Stop		Stop	
TAPE Rec		Rec	
CD ICD I<< <<		I<<	
TAPE <<		<<	
TAPE >>		>>	
CD >> >>I		>>I	
D.Skip		List	
SURR		Dual	
Program		Options	
Sleep		Sleep	
Repeat		Text	
TAPE Rev. Play		Left	
TAPE Stop		Ok	
TAPE Play		Right	
Volume+		Vol +	
EQ Patt.		Smart	
Preset+		Ch +	
Volume-		Vol -	
XDSS		Media	
Preset-		Ch -	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	



Power button (red), MUTE, SHIFT (orange).

TV, DVD, SAT, AUX (PLAY MODE, REC MODE).

PLAY MODE: Play, Pause, Stop, Still, Eject.

DISC NAV: Previous, First, Next, Last.

SOUND: LIST, DUAL, SUBT, OPT.

AD: SLEEP, SEARCH, PICTURE, ECO.

SETTINGS: TV/R, FORMAT, 3D, TIMER.

E-MANUAL: D.MENU, TEXT, Up arrow, AV.

TOP MENU: MENU, OK, INFO.

Navigation: Up, Down, Left, Right arrows.

CLEAR: EXIT, RETURN BACK, BACK.

VOL: +, -, HOME, SMART, APP, MEDIA, CH, +, -.

Numeric keypad: 1-9, 0, FAV, PRE-CH.

GUIDE, A, B, C, D.

Mandis shop logo, www.mandis.tv.