


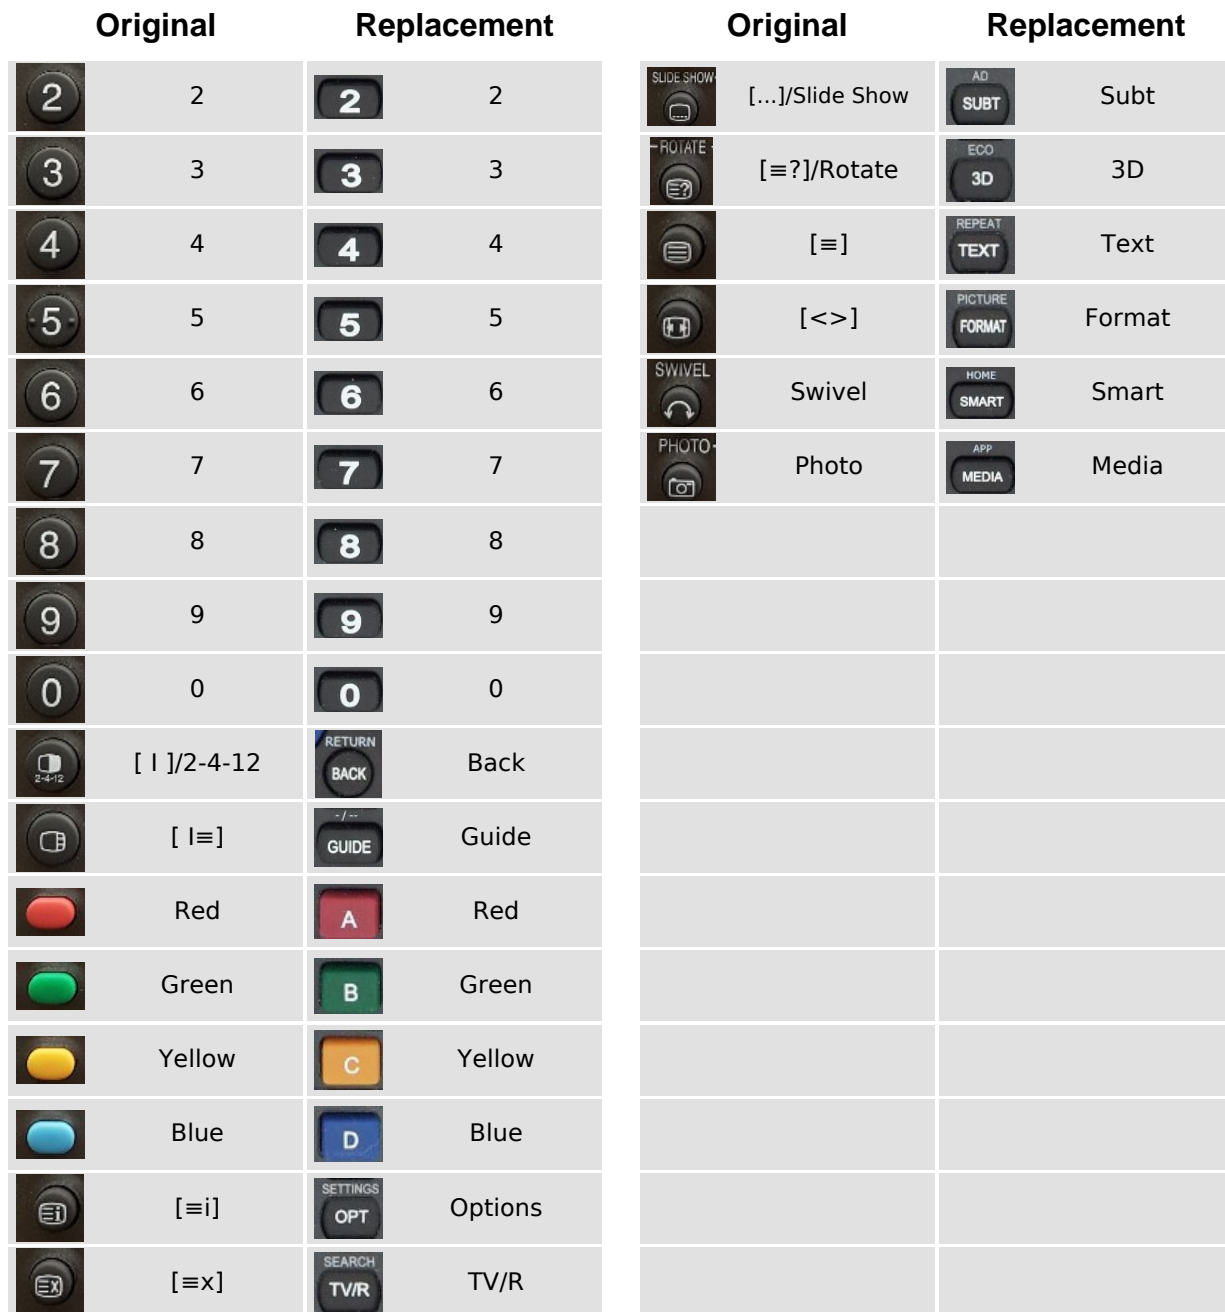
















 

 

 





 


Original	Replacement
	Power
	[i+]
	AV1
	AV1
	Rec/AV2
	Rec/AV2
	Stop/AV3
	Stop/AV3
	Play/AV4
	Play/AV4
	AV5
	AV5
	Pause/AV6
	Pause/AV6
	<</RGB1
	<</RGB1
	>>/RGB2

Original	Replacement
	>>/RGB2
	Menu
	[>I<]/Recall
	Up
	Left
	OK
	Right
	Down
	J/S.Mode
	(I)/P.Mode
	Vol+
	Vol-
	I/II
	Mute
	P+
	P-
	1
























 



 



 








Original	Replacement	Original	Replacement
	Power		Power
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Stop		Stop
	Play		Play
	Pause		Pause
	<<		<<
	>>		>>
	P+		Ch +
	P-		Ch -





Original	Replacement	Original	Replacement
	Power		Power
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

