













 







 



 




 

 




| Original | Replacement |
|---|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Home |  Shift + Menu / |
|  0 |  0 |
|  YouTube |  Shift + Yellow / YouTube / |
|  Vol+ |  Vol+ |
|  TV |  TV/Radio / |
|  CH+ |  CH+ / Page+ |

| Original | Replacement |
|---|--|
|  Vol- |  Vol- |
|  Source |  AV / Input / RDS |
|  CH- |  CH- / Page- |
|  USB |  Shift + 8 |
|  Option |  Setup / OPT / |
|  Info |  Info / Angle |
|  FAV |  Fav / Marker / PC |
|  Menu |  Menu / Home |
|  EPG |  Guide / EPG / -/-- |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Back |  Back / Return |
|  Exit |  Exit / Cancel / Clear |
|  Netflix |  Shift + Red / Netflix / Search |





| Original | | Replacement | | Original | | Replacement | |
|----------|--------|-------------|-----------------------------|----------|-------|-------------|-----------------------|
| | Red | | Red / Netflix / Search | | Play | | Play / Slow |
| | Green | | Green / APP / Repeat | | Pause | | Pause / Step / Freeze |
| | Yellow | | Yellow / YouTube / Repeat | | Stop | | Stop / Hold |
| | Blue | | Blue / Prime Video / Random | | Audio | | Audio / Lang I/II |
| | Sleep | | Sleep / Timer | | | | |
| | Zoom- | | Shift + Zoom / Zoom / | | | | |
| | Zoom+ | | Zoom / Size | | | | |
| | List | | Smart / List | | | | |
| | Text | | Text / Goto | | | | |
| | Sub | | Subtitle / EQ | | | | |
| | Recall | | Shift + Back / Return | | | | |
| | Eco | | Display / Media | | | | |
| | << | | << / Tune- | | | | |
| | >> | | >> / Tune+ | | | | |
| | I< | | I<< / Preset- | | | | |
| | >I | | >>I / Preset+ | | | | |
| | Rec | | Rec / Rec Mode | | | | |

