
 
 


 






 
 
 




 
 




 

 

 

 
 









 

 


 






 

 







 




Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Slow Up	 Ch +	Menu Down	 Down
Stop	 Stop	Volume+	 Vol +
Pause	 Pause	Progr.	 Sleep
Subt.	 Subt	Next	 >>
Auto/Track	 Media	Volume-	 Vol -
Rep/A-B	 +  Shift + Text	Prev.	 <<
Title	 List	Top Menu	 D. Menu
Repeat/1/All	 Text	1	 1
Zoom	 +  Shift + Eject	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8		
9	 9		
+10	 Guide		
0	 0		
C/CH	 Pre Ch		
ON/Off	 +  Shift + Power		
Open/Close	 Eject		
Resume	 +  Shift + Play		
Record	 Rec		
Play	 Play		
Karaoke/Step	 +  Shift + Pause		
Rewind	 <<		
Play/Back	 +  Shift + Stop		
Np	 +  Shift + Subt		
F.Forward	 >>		
Setup	 OPT Options		
Video	 +  Shift + D. Menu		

Original	Replacement	Original	Replacement
Input Source	 +  Shift + AV		
Search	 +  Shift + Up		
Mode	 3D		
R/L	 +  Shift + Info		
Key-	 +  Shift + Left		
Auto Scan	 +  Shift + Ok		
Key+	 +  Shift + Right		
Syst.Preset	 Smart		
Store	 +  Shift + Down		
Vocal/Assist	 +  Shift + Vol +		
Echo+	 +  Shift + Ch +		
Tone	 +  Shift + Vol -		
Audio	 Dual		
Echo-	 +  Shift + Ch -		
5.1Ch	 +  Shift + 1		
2.1Ch	 +  Shift + 2		
Pro Logic	 +  Shift + 3		



Original	Replacement	Original	Replacement
NTSC/PAL	 Format		
Effect	 +  Shift + 5		
EQ	 +  Shift + 6		
Dimmer	 +  Shift + Mute		
Erase	 Green		
Mark	 Red		
Clear/00:00	 Exit		
Digest	 +  Shift + Guide		
Lang	 +  Shift + Dual		
Shuffle	 Blue		
Random	 Yellow		

