



Original	Replacement	Original	Replacement
Off	Shift + Power	Night	TV/Radio /
On	Power	M-Room	Zoom / Size
Mute	Mute / Dimmer	Vol-	Vol-
AVR	Smart / List	CH.	Info / Angle
DVD	Shift + 2	Up	Up
CD	Shift + 3	SPKR/Menu	Menu / Home
Tape	Shift + 5	Left	Left
VID1/VCR	Shift + 4	Set	OK
VID2/TV	Shift + 1	Right	Right
VID3/CBL/SAT	Shift + 0	Digital	D.Menu / Top
VID4	Shift + 7	Down	Down
AM/FM	Shift + 6	Delay/Normal	Setup / OPT /
6 CH	Shift + 8	1	1
Sleep	Sleep / Timer	2	2
Test	Text / Goto	3	3
Vol+	Vol+	4	4
Surr.	Eject / Surround	5	5





Original	Replacement	Original	Replacement
	6		6
	7		7
	8		8
	Tun-M		Red / Netflix / Search
	9		9
	0		0
	Mem		Green / APP / Repeat
	Tuning ▲		>> / Tune+
	Direct		Back / Return
	Clear		Exit / Cancel / Clear
	Preset ▲		>>I / Preset+
	Tuning ▼		<<< / Tune-
	OSD		Display / Media
	RDS		AV / Input / RDS
	Preset ▼		I<<< / Preset-
	<<< DVD		Shift + <<< /
	Play DVD		Shift + Play / Slow

Original	Replacement	Original	Replacement
	>>> DVD		Shift + >>> /
	Stop DVD		Shift + Stop /
	Pause DVD		Shift + Pause / Step /
	I<<</Skip Down		Shift + I<<< / Preset-
	Skip Up/>>>I		Shift + >>>I / Preset+





Original		Replacement		Original		Replacement	
	Power Off		Shift + Power		3		3
	Power On		Power		4		4
	Vol+		Vol+		5		5
	Night		TV/Radio /		6		6
	[≡] / M-Room		Zoom / Size		7		7
	Vol-		Vol-		8		8
	CH.		Info / Angle		Tun-M		Red / Netflix / Search
	Up		Up		9		9
	SPKR/Menu		Menu / Home		0		0
	Left		Left		Mem		Green / APP / Repeat
	Set		OK		Direct		Back / Return
	Right		Right		Clear		Exit / Cancel / Clear
	Digital/Exit		D.Menu / Top		Preset ▲		Shift + >>I / Preset+
	Down		Down		RDS		AV / Input / RDS
	Delay/Normal		Setup / OPT /		Preset ▼		Shift + I<< / Preset-
	1		1		<<		<< / Tune-
	2		2		Play		Play / Slow





	Original	Replacement		Original	Replacement
	>>	>> / Tune+			
	Stop	Stop / Hold			
	Pause	Pause / Step / Freeze			
	I<<	I<< / Preset-			
	>>I	>>I / Preset+			

	Original	Replacement		Original	Replacement





Original	Replacement	Original	Replacement
Power On	Power	Mem	Green / APP / Repeat
Power Off	Shift + Power	RDS	AV / Input / RDS
Vol-	Vol-	>>	>> / Tune+
Vol+	Vol+	<<	<< / Tune-
SPKR/Menu	Menu / Home	Play	Play / Slow
1	1	Stop	Stop / Hold
Delay/Normal	Setup / OPT /	Direct	Back / Return
2	2	Pause	Pause / Step / Freeze
3	3	Preset ▲	CH+ / Page+
4	4	>>	>>  / Preset+
5	5	<<	<< / Preset-
6	6	Power (On / Off)	Mute / Dimmer
7	7	PR+ VCR	Shift + CH+ /
8	8	PR- VCR	Shift + CH- /
9	9	Vol- VCR	Shift + Vol-
0	0	Vol+ VCR	Shift + Vol+
Tun-M	Red / Netflix / Search	1 VCR	Shift + 1





	Original	Replacement	
	2 VCR	SHIFT +	Shift + 2
	3 VCR	SHIFT +	Shift + 3
	4 VCR	SHIFT +	Shift + 4
	5 VCR	SHIFT +	Shift + 5
	6 VCR	SHIFT +	Shift + 6
	7 VCR	SHIFT +	Shift + 7
	8 VCR	SHIFT +	Shift + 8
	9 VCR	SHIFT +	Shift + 9
	0 VCR	SHIFT +	Shift + 0
	Clear VCR	SHIFT +	Shift + Exit / Cancel / Clear
	Play VCR	SHIFT +	Shift + Play /
	Stop VCR	SHIFT +	Shift + Stop /
	Rec VCR	SHIFT +	Shift + Rec / Rec Mode
	>> VCR	SHIFT +	Shift + >> /
	<< VCR	SHIFT +	Shift + << /

Original	Replacement





	Original	Replacement	Original	Replacement
	<>	 Play / Slow		
	>>	 >> / Tune+		
	<<	 << / Tune-		
	Stop	 Stop / Hold		
	Rec	 Rec / Rec Mode		

