


 
 

 





 

 








 





Original	Replacement
 Power	 Power
 C	 Pre Ch
 Multi Window	 Smart
 Aspect	 Format
 SRS	 Dual
 SD	 Media
 Mute	 Mute
 TV/AV	 AV
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Red	 Red
 Green	 Green

Original	Replacement
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 F.P.	 3D
 Index	 TV/R
 Hold	 Shift + Stop
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / VCR	 0
 N	 Options





Original	Replacement	Original	Replacement
 i	 Info	 Direct TV Rec	 Shift + Rec
 CH+	 Ch +		
 CH-	 Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Programme+	 Shift + Ch +		
 Programme-	 Shift + Ch -		
 << / I<<	 <<		
 << / I<<	 I<<		
 >> / >>I	 >>		
 >> / >>I	 >>I		
 Stop	 Stop		
 Pause / Step	 Pause		
 Play	 Play		
 Power (DVD)	 Shift + Power		
 SD Rec	 Shift + Media		
 Rec	 Rec		

