

























































 



 



 




 




 















Original		Replacement		Original		Replacement	
	Power		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Vol+		Vol+				
	CH+		CH+ / Page+				
	Vol-		Vol-				
	Mute		Mute / Dimmer				
	CH-		CH- / Page-				
	Source		AV / Input / RDS				














 












 

 
 
 



 







 





























Original		Replacement		Original		Replacement	
	Power		Power		Red		Red / Netflix / Search
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		OK
	4		4		Right		Right
	5		5		Exit		Exit / Cancel / Clear
	6		6		Down		Down
	7		7		i		Info / Angle
	8		8		CH+		CH+ / Page+
	9		9		CH-		CH- / Page-
	0		0				
	Menu		Menu / Home				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				














Original		Replacement		Original		Replacement	
	Power		Power		Pause		Pause / Step / Freeze
	1		1		Red		Red / Netflix / Search
	2		2		Green		Green / APP / Repeat
	3		3		Yellow		Yellow / YouTube / Repeat
	4		4		Blue		Blue / Prime Video / Random
	5		5		Media		Display / Media
	6		6		Up		Up
	7		7		Guide		Guide / EPG / -/-
	8		8		Left		Left
	9		9		OK/List		OK
	0		0		OK/List		Shift + Smart / List
	Menu		Menu / Home		Right		Right
	<<		<< / Tune-		Exit		Exit / Cancel / Clear
	Play		Play / Slow		Down		Down
	>>		>> / Tune+		Last		Back / Return
	Rec		Rec / Rec Mode		Vol+		Vol+
	Stop		Stop / Hold		Info		Info / Angle





Original	Replacement
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 I>	 Shift + Play /
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 ?	 D.Menu / Top
 Audio	 Audio / Lang I/II
 [...]	 Subtitle / EQ
 [=+]	 Sound / Title
 [= ]=	 Smart / List
 OPT+	 Setup / OPT /
 Edit	 Fav / Marker / PC
 Teletext	 Text / Goto
 Tv/Radio	 TV/Radio /
 Sleep	 Sleep / Timer







Original	Replacement
 Source	 AV / Input / RDS
 Wide	 Zoom / Size
 V-Format	 Picture / Format







Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu / Home
 <<	 << / Tune-
 >>	 >> / Tune+
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK/List	 OK

Original	Replacement
 OK/List	 Smart / List
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Vol+	 Vol+
 Info	 Info / Angle
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-

