



Original	Replacement
 Standby	 Shift + Power
 Power	 Power
 Sleep	 Sleep / Timer
 Phono	 Shift + Fav / Marker / PC
 Tuner	 Shift + 6
 CD	 Shift + 3
 Multi CH In	 Fav / Marker / PC
 V-AUX	 Shift + 7
 CBL/SAT	 Shift + 0
 MD/TAPE	 Shift + 5
 CD-R	 Shift + 9
 DTV	 Shift + 1
 VCR 1	 Shift + 4
 DVR	 Shift + 8
 VCR 2	 Shift + Guide / EPG / -/-
 DVD	 Shift + 2
 Volume+	 Vol+

Original	Replacement
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 Title/Level	 Sound / Title
 Up / Preset/CH+	 Up
 Menu/Set Menu	 Menu / Home
 Pure Direct	 Picture / Format
 Left / A/B/C/D/E-	 Left
 Enter	 OK
 Right /	 Right
 Night	 Shift + Sleep / Timer
 Audio	 Audio / Lang I/II
 Return	 Back / Return
 Down / Preset/CH-	 Down
 Display	 Display / Media
 Straight	 Zoom / Size
 STEREO	 1
 HALL	 2







 



 







 

 





 

 



 

 



 

 

 



 

 

 




















Original	Replacement
Power	Power
Preset Up	>>I / Preset+
Preset Up	CH+ / Page+
Vol+	Vol+
Preset Down	I<< / Preset-
Preset Down	CH- / Page-
Vol-	Vol-
Mute	Mute / Dimmer
Left A/B/C/D/E	Left
Enter	OK
Right A/B/C/D/E	Right
Display	Display / Media
1	1
2	2
3	3
4	4
5	5

Original	Replacement
6	6
7	7
8	8
9	9
0	0
ENT	Fav / Marker / PC
Freq/RDS	AV / Input / RDS
Eon	D.Menu / Top
Mode PTY Seek	Text / Goto
PTY Seek Start	Setup / OPT /





Original	Replacement	Original	Replacement
 Power	 Power	 4	 4
 Vol+	 Vol+	 5	 5
 Vol-	 Vol-	 6	 6
 Mute	 Mute / Dimmer	 7	 7
 Title	 Sound / Title	 8	 8
 Up	 Up	 9	 9
 Menu	 Menu / Home	 0	 0
 Left	 Left	 +10	 Guide / EPG / -/-
 Enter	 OK	 ENT	 Fav / Marker / PC
 Right	 Right	 <<	 << / Tune-
 Audio	 Audio / Lang I/II	 >>	 >> / Tune+
 Return	 Back / Return	 I<<	 I<< / Preset-
 Down	 Down	 >>I	 >>I / Preset+
 Display	 Display / Media	 Rec	 Rec / Rec Mode
 1	 1	 Stop	 Stop / Hold
 2	 2	 Pause	 Pause / Step / Freeze
 3	 3	 Play	 Play / Slow

