



Original	Replacement	Original	Replacement
Power On	Power	2	2
Power Off	Shift + Power	3	3
Mute	Mute	4	4
Stereo	Shift + Dual	5	5
Cable/Sat	Green	6	6
TV	Blue	7	7
CD	Yellow	8	8
Menu	Menu	9	9
Harman Volume	Smart	0	0
Exit	Exit	Clear	Shift + Exit
Tone Control	Back	Direct	Guide
Up	Up	Vol+	Vol +
Down	Down	Vol-	Vol -
Right	Right	CH/Tuner Up	Ch +
Left	Left	CH/Tuner Down	Ch -
OK	Ok	Speaker 1	Options
1	1	Speaker 2	Dual





Original	Replacement
 Sleep	 Sleep
 Dim	 TV/R
 P.Scan	 Text
 A.Preset	 AV
 MEM	 Format
 RDS	 Subt
 Prev.CH	 Pre Ch
 I<	 I<<
 <<	 <<<
 >>	 >>>
 >I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Phono	 Shift + 1
 FM/AM	 Shift + 2
 USB	 Shift + 3

Original	Replacement
 Bluetooth	 Shift + 4
 vTuner	 Shift + 5
 Network	 Shift + 6
 AUX	 Shift + 7
 Digital	 Shift + 8





Original	Replacement
Power On	Power
Power Off	Shift + Power
Left	Left
Right	Right
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Vol+ Stereo	Vol +
Vol- Stereo	Vol -
Stereo	Dual

Original	Replacement
Cable/Sat	Green
CD	Yellow
TV	Blue
Mute	Mute





Original	Replacement	Original	Replacement
Power On	Power	2	2
Power Off	Shift + Power	3	3
Mute	Mute	4	4
Stereo	Shift + Dual	5	5
Cable/SAT	Green	6	6
TV	Blue	7	7
CD	Yellow	8	8
Menu	Menu	9	9
Harman Volume	Smart	0	0
Exit	Exit	Clear	Shift + Exit
Tone Control	Back	Direct	Guide
Up	Up	Vol+ Stereo	Vol +
Down	Down	Vol- Stereo	Vol -
Right	Right	CH/Tuner Down	Ch +
Left	Left	CH/Tuner Up	Ch -
OK	Ok	Speaker 1	Options
1	1	Speaker 2	Dual





Original		Replacement		Original		Replacement	
	Sleep		Sleep				
	DIM		TV/R				
	P.Scan		Text				
	A.Preset		AV				
	MEM		Format				
	RDS		Subt				
	Prev.CH		Pre Ch				
	I<		I<<				
	<<		<<				
	>>		>>				
	>I		>>I				
	Stop		Stop				
	Play		Play				
	Pause		Pause				

