

 

 






 





 
 






 







 


Original		Replacement		Original		Replacement	
	VHS/DVD Power		Power		Create Chapter		TV/R
	Direct TV Rec		Subt		I<< Skip		I<<
	VHS/DVD		Smart		Skip >>I		>>I
	1		1		REW / << Slow/Search		<<
	2		2		FF / Slow/Search		>>
	3		3		Stop		Stop
	4		4		Pause		Pause
	5		5		Play		Play
	6		6		Direct Navigator / Top Menu		D. Menu
	7		7		Functions		List
	8		8		Up		Up
	9		9		Left		Left
	0		0		Enter		Ok
	Cancel / Reset		Exit		Right		Right
	Input Select		Guide		Down		Down
	CH+ / Tracking/V-Lock+		Ch +		Sub Menu		Menu
	CH- / Tracking/V-Lock-		Ch -		Return		Back



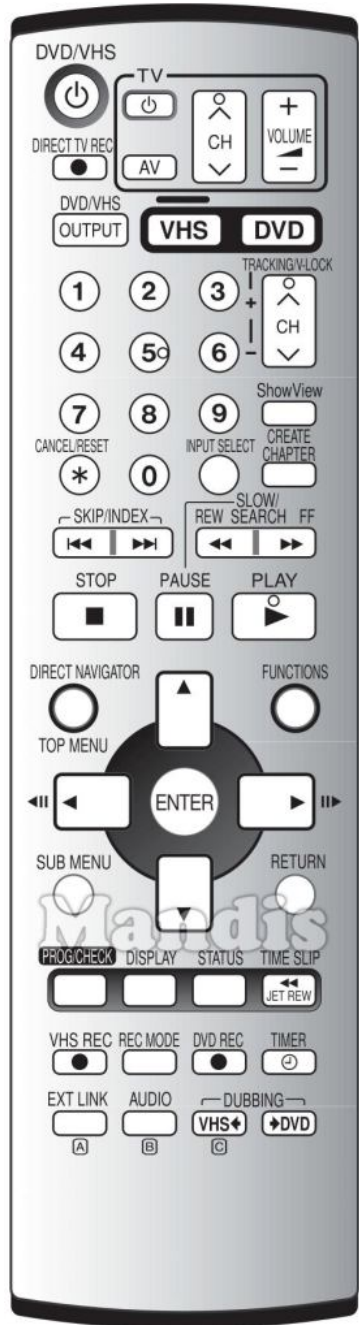

Original		Replacement		Original		Replacement	
	VHS/DVD Power		Power		ShowView		Media
	Direct TV Rec		Subt		I<< Index		I<<
	VHS/DVD		Smart		Index >>I		>>I
	1		1		REW		<<
	2		2		FF		>>
	3		3		Stop		Stop
	4		4		Pause		Pause
	5		5		Play		Play
	6		6		Up		Up
	7		7		Left		Left
	8		8		Enter		Ok
	9		9		Right		Right
	0		0		Down		Down
	Cancel / Reset		Exit		Return		Back
	Input Select		AV		Prog/Check		Sleep
	CH+ / Tracking/V-Lock+		Ch +		Display		Info
	CH- / Tracking/V-Lock-		Ch -		Jet Rew		Shift + <<



