

 




 

 
 

 
 
 
 
 




Original		Replacement		Original		Replacement	
	Standby		Power		Prog-		Ch -
	Open/Close		Eject		Timer Prog		Sleep
	Input Select		AV		Variable Replay		Pre Ch
	HDMI		TV/R		Variable Skip		Shift + Pre Ch
	1		1		Top Menu		Menu
	2		2		Disc Menu		D. Menu
	3		3		Up		Up
	4		4		Left		Left
	5		5		Enter		Ok
	6		6		Right		Right
	7		7		Down		Down
	8		8		Display		Info
	9		9		Return		Shift + Back
	0		0		Mode		Yellow
	Setup		Options		Search		Blue
	Clear		Exit		<<		<<
	Prog+		Ch +		Play		Play





	Original	Replacement	
	>>	 >>	
	I<<	 I<<	
	Stop	 Stop	
	>>I	 >>I	
	Pause	 Pause	
	VCR	 SHIFT +  Shift + 1	
	HDD	 SHIFT +  Shift + 2	
	DVD	 SHIFT +  Shift + 3	
	Time Slip	 SHIFT +  Shift + Sleep	
	Dubbing	 RETURN BACK Back	
	Rec Mode	 SHIFT +  Shift + Rec	
	Rec	 REC MODE Rec	
	Subtitle	 AD SUBT Subt	
	1.3x/0.8x PPlay	 PICTURE FORMAT Format	
	O))/Audio	 SOUND DUAL Dual	
	Sat Link	 ECO 3D 3D	

Original	Replacement		

