


 
 



 

 






 



 



 


 




 

 







 

 



 













 

 
 
 

 




Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Audio Monitor	 Dual	 -/--	 Guide
 Format	 Format	 Input Select	 AV
 Eject	 Eject	 Vol+	 Vol +
 [i+]	 Info	 Vol-	 Vol -
 Counter / Remain	 Media	 Prog+	 Ch +
 Clear	 Exit	 Prog-	 Ch -
 TV / Video	 TV/R	 Slow	 Shift + <<
 1	 1	 x2	 Shift + >>
 2	 2	 I<<	 I<<
 3	 3	 >>I	 >>I
 4	 4	 Rec	 Rec
 5	 5	 SP / LP	 Smart
 6	 6	 Menu	 Menu
 7	 7	 Timer	 Shift + AV
 8	 8	 Up	 Up
 9	 9	 Pause	 Pause





Original	Replacement
 Power	 Power
 Display	 Info
 Format	 Format
 Audio Monitor	 Dual
 TV / Video	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [=]	 Text
 []	 TV/R

Original	Replacement
 -/--	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 Prog+	 Ch +
 Prog-	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

