






 





 

 







 



 

 
 



 


 



 



 











 
 







 




Original		Replacement		Original		Replacement	
	Power		Power		Goto		Media
	Eject		Eject		Setup		Options
	Mute		Mute		Angle		Format
	OSD / Info		Info		Text / Title		Text
	V-Mode		Smart		Subtitle		Subt
	P/N / Fav		Pre Ch		Menu		Menu
	1		1		Up		Up
	2		2		Left		Left
	3		3		Enter		Ok
	4		4		Right		Right
	5		5		Down		Down
	6		6		PBC / EPG		Guide
	7		7		Source		AV
	8		8		Exit		Exit
	9		9		<<		<<
	0		0		>>		>>
	10+		Shift + Guide		Play / Pause		Play





Original	Replacement	Original	Replacement
Play / Pause	Pause	Vol+	Vol +
Stop	Stop		
I<<	I<<		
>>I	>>I		
Red / Prog	Red		
Red / Prog	Sleep		
Green / Step	Green		
Yellow / Repeat	Yellow		
Yellow / Repeat	Shift + Text		
Blue / A-B	Blue		
Zoom	Shift + Eject		
Slow	TV/R		
Vocal	Dual		
Audio	Shift + Dual		
CH-	Ch -		
CH+	Ch +		
Vol-	Vol -		

