









 

 

 





 

 


 
 









 

 





| Original  | Replacement  |
|---|--|
|  Power           |  Power                          |
|  i               |  DISPLAY INFO                   |
|  Input Select    |  TIMER AV                       |
|  Picture Size    |  PICTURE FORMAT                 |
|  1               |  1                              |
|  2               |  2                              |
|  3               |  3                              |
|  4               |  4                              |
|  5               |  5                              |
|  6               |  6                              |
|  7              |  7                             |
|  8             |  8                            |
|  9             |  9                            |
|  0             |  0                            |
|  Timer         |  SHIFT + TIMER AV Shift + AV |
|  Mute          |  MUTE Mute                    |
|  [≡o] [≡o]/P↔P |  RETURN BACK Back             |

| Original  | Replacement  |
|---|--|
|  Audio I/II      |  SOUND DUAL Dual      |
|  [≡?]            |  SETTINGS OPT Options |
|  [≡◇]            |  ECO 3D 3D            |
|  Menu            |  TOP MENU MENU Menu   |
|  [≡]             |  REPEAT TEXT Text     |
|  P+              |  + CH Ch +            |
|  Up              |  Up Up                |
|  P-              |  CH - Ch -            |
|  Down            |  Down Down            |
|  Vol+            |  + VOL Vol +          |
|  Right          |  Right Right         |
|  Vol-          |  VOL - Vol -        |
|  Left          |  Left Left          |
|  Enter/CH List |  OK Ok              |
|  Exit          |  CLEAR EXIT Exit    |
|  Freeze / [≡+] |  FAV PRE-CH Pre Ch  |
|  Red           |  A Red              |





| Original   | Replacement  | Original | Replacement |
|--|--|----------|-------------|
|  Green  |  B Green  |          |             |
|  Yellow |  C Yellow |          |             |
|  Blue   |  D Blue   |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |
|  |  |          |             |

