



Original		Replacement		Original		Replacement	
	Power		Power		Return / Text		Shift + Back
	Mute		Mute		Subtitle		Subt
	Red / Eject		Red		Display		Shift + Info
	Red / Eject		Eject		Menu / Info		Info
	Green / Title		Green		Menu / Info		D. Menu
	Yellow / DVD		Yellow		Menu		Menu
	Yellow / DVD		Options		Up		Up
	Blue / A-B		Blue		Source		AV
	<</[≡o]		<<		Left		Left
	>>/[≡?]		>>		OK		Ok
	I<</[≡+]		I<<		Right		Right
	>>I/[≡..]		>>I		EPG		Guide
	Play		Play		Down		Down
	Pause		Pause		Exit		Exit
	Stop		Stop		Vol+		Vol +
	Angle / [≡i]		Smart		FAV		Pre Ch
	Return / Text		Text		CH+		Ch +





Original		Replacement		Original	Replacement
	Vol-		Vol -		
	REP		Rec		
	CH-		Ch -		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Audio		Dual		
	0		0		
	Recall / Goto		Back		

