



| Original | | Replacement | | Original | | Replacement | |
|---|----------------|---|--------|---|-------|---|--------|
|  | Standby |  | Power |  | 2 |  | 2 |
|  | Mute |  | Mute |  | 3 |  | 3 |
|  | Up |  | Up |  | 4 |  | 4 |
|  | Left |  | Left |  | 5 |  | 5 |
|  | OK |  | Ok |  | 6 |  | 6 |
|  | Right |  | Right |  | 7 |  | 7 |
|  | Down |  | Down |  | 8 |  | 8 |
|  | Menu |  | Menu |  | 9 |  | 9 |
|  | Exit |  | Exit |  | 0 |  | 0 |
|  | Red / UHF |  | Red |  | EPG |  | Guide |
|  | Green / Audio |  | Green |  | Group |  | Pre Ch |
|  | Green / Audio |  | Dual |  | Vol+ |  | Vol + |
|  | Yellow / Pause |  | Yellow |  | Vol- |  | Vol - |
|  | Yellow / Pause |  | Pause |  | CH+ |  | Ch + |
|  | Blue / Recall |  | Blue |  | CH- |  | Ch - |
|  | Blue / Recall |  | Back |  | Page+ |  | >> |
|  | 1 |  | 1 |  | Page- |  | << |



