

 





 



 



 















 



 







 







 



 



 











Original	Replacement	Original	Replacement
 Power Audio	 Power	 0	 0
 Function	 Smart / List	 Subtitle	 Subtitle / EQ
 Input	 AV / Input / RDS	 Prog / Memo	 Fav / Marker / PC
 Sleep / Dimmer	 Sleep / Timer	 Repeat	 Green / APP / Repeat
 Sleep / Dimmer	 Shift + Mute / Dimmer	 Clear	 Exit / Cancel / Clear
 Return	 Back / Return	 Top Menu	 D.Menu / Top
 1	 1	 Up / Preset+	 Up
 2	 2	 Up / Preset+	 Shift + >>1 / Preset+
 3	 3	 Menu	 Menu / Home
 Surround	 Eject / Surround	 Left / Tuning-	 Left
 4	 4	 Left / Tuning-	 Shift + << /
 5	 5	 Enter	 OK
 6	 6	 Right / Tuning+	 Right
 Scan Mode	 TV/Radio /	 Right / Tuning+	 Shift + >> /
 7	 7	 Set Up	 Setup / OPT /
 8	 8	 Down / Preset-	 Down
 9	 9	 Down / Preset-	 Shift + I<< / Preset-





Original	Replacement	Original	Replacement
Display	Display / Media		
Stop	Stop / Hold		
Play / FM Mode	Play / Slow		
Pause	Pause / Step / Freeze		
Volume+	Vol+		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
Muting	Mute / Dimmer		
<< / Slow-	<< / Tune-		
>> / Slow+	>> / Tune+		
Volume-	Vol-		

