 











 



 



 







 







 



 

 









 



















Original	Replacement	Original	Replacement
	 Zoom / Size		 0
	 Power		 Display / Media
	 TV/Radio /		 Setup / OPT /
	 Guide / EPG / -/-		 Up
	 Info / Angle		 Menu / Home
	 Picture / Format		 Left
	 AV / Input / RDS		 OK
	 1		 Right
	 2		 Back / Return
	 3		 Down
	 4		 Exit / Cancel / Clear
	 5		 Vol+
	 6		 Fav / Marker / PC
	 7		 CH+ / Page+
	 8		 Vol-
	 9		 Audio / Lang I/II
	 Smart / List		 CH- / Page-





Original	Replacement	Original	Replacement
Mute	Mute / Dimmer		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow / Brightness-	Yellow / YouTube / Repeat		
Blue /	Blue / Prime Video / Random		
Stop	Stop / Hold		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
Subtitle	Subtitle / EQ		
<<	<< / Tune-		
<<	<< / Preset-		
>>	>> / Tune+		
>>	>>  / Preset+		
Text	Text / Goto		
T.Opt	D.Menu / Top		

