
 
 

 


 

 

 

 

 

 

 

 
 
 

 






























Original	Replacement	Original	Replacement
	Power		i Info / Angle
	CD		Cancel
	Tuner		Sound Ctrl
	Tape		Up
	AUX		Down
	Display Eject		Mute
	Power Sound		Bass
	I<<		Mode
	>>I		Treble
	<I		
	I>/Pause		
	PTY/Stop		
	CD Copy		
	Rec		
	Memory		
	+		
	-		
	Power		Info / Angle
	3		Exit / Cancel / Clear
	6		Sound / Title
	5		CH+ / Page+
	7		CH- / Page-
	Guide / EPG / -/--		Mute / Dimmer
	TV/Radio /		Media / Display
	Green / APP / Repeat		Picture / Format
	>>I / Preset+		Text / Goto
	Eject / Surround		
	Yellow / YouTube / Repeat		
	Stop / Hold		
	Fav / Marker / PC		
	Rec / Rec Mode		
	Menu / Home		
	Up		
	Down		

