













































 

 





 





 

 

 

 





 



| Original | Replacement |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Info |  Info / Angle |
|  Recall |  Back / Return |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  FAV |  Fav / Marker / PC |

| Original | Replacement |
|--|--|
|  SAT |  Shift + 0 |
|  Tv/Radio |  TV/Radio / |
|  Guide |  Guide / EPG / -/-- |
|  Freeze |  Pause / Step / Freeze |
|  AUX In |  AV / Input / RDS |
|  UHF |  Display / Media |
|  Audio |  Audio / Lang I/II |
|  Red |  Red / Netflix / Search |
|  Yellow |  Yellow / YouTube / Repeat |
|  Green |  Green / APP / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Text |  Text / Goto |
|  Positioner |  Setup / OPT / |
|  Audio R/L |  D.Menu / Top |
|  OK |  OK |
|  Up |  Up |
|  Down |  Down |





| Original | Replacement |
|---|---|
|  Right |  Right |
|  Left |  Left |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

