











 



 












 
 



 



 



 



 



 



 



 



 



 





| Original | | Replacement | | Original | | Replacement | |
|---|----------------------|---|--------------------------|---|----------------|---|-----------------------|
|  | Power |  | Power |  | 0 |  | 0 |
|  | HDD/Music Collection |  | Red / Netflix / Search |  | Cancel |  | Exit / Cancel / Clear |
|  | DVD |  | Shift + 2 |  | +10/-/-- |  | Guide / EPG / -/-- |
|  | Tuner |  | Shift + 6 |  | Select > |  | CH+ / Page+ |
|  | Power Tv |  | Shift + Power |  | < Select |  | CH- / Page- |
|  | TV/AV Tv |  | Shift + AV / Input / RDS |  | Vol+ |  | Vol+ |
|  | Vol+ Tv |  | Shift + Right |  | Vol- |  | Vol- |
|  | Vol- Tv |  | Shift + Left |  | I<< Skip |  | I<< / Preset- |
|  | 1 |  | 1 |  | Skip >>I |  | >>I / Preset+ |
|  | 2 |  | 2 |  | << Slow Search |  | << / Tune- |
|  | 3 |  | 3 |  | Slow Search >> |  | >> / Tune+ |
|  | 4 |  | 4 |  | Stop |  | Stop / Hold |
|  | 5 |  | 5 |  | Pause |  | Pause / Step / Freeze |
|  | 6 |  | 6 |  | Play |  | Play / Slow |
|  | 7 |  | 7 |  | Menu/Play List |  | Menu / Home |
|  | 8 |  | 8 |  | Functions |  | Info / Angle |
|  | 9 |  | 9 |  | Sub Menu |  | Subtitle / EQ |



