










 









 






 






Original	Replacement
Power Audio	Power
Tv Direct	Shift + 0
Power DVR/DVD	Red / Netflix / Search
Power VCR	Green / APP / Repeat
Power STB	Yellow / YouTube / Repeat
Power Tv	Blue / Prime Video / Random
DVR/DVD	Fav / Marker / PC
VCR	Shift + 4
Video	Shift + 5
TV	Shift + 1
DVD Multi	Guide / EPG / -/--
FM/AM	Shift + 6
Tv/Video	TV/Radio /
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
Channel+	Shift + Audio / Lang I/II

Original	Replacement
Channel-	Shift + Setup / OPT / Tools
Tv Vol+	Shift + Vol+
Tv Vol-	Shift + Vol-
I<</Tuning-	I<< / Preset-
Play/FM Mode	Play / Slow
>>I/Tuning+	>>I / Preset+
<<	<< / Tune-
Stop/Memory	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Menu	Menu / Home
Top Menu/STB	D.Menu / Top
Smart Surround Setup	Sound / Title
On	Picture / Format
Up/TA/News/Inf	Up
Down/PTY	Down
Right/PTY+	Right





Original	Replacement
 Left/PTY-	 Left
 Enter	 OK
 fsIRate/Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 SetUp	 Setup / OPT /
 DVD/HDD/Title/Gr	 Shift + 2
 Zoom/→	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 ←	 Back / Return
 VFP/Progressive	 Smart / List
 Angle	 Info / Angle
 Ex/Es/Return	 Shift + Back / Return
 Cancel	 Exit / Cancel / Clear
 DVD Card/Rec	 Rec / Rec Mode
 Rec Pause	 Shift + Pause / Step /
 Surround	 Eject / Surround
 Display/Dimmer	 Display / Media
 Input Analog/Digital	 AV / Input / RDS
 L-Front+/Thumbn	 Shift + Up
 L-Front-	 Shift + Down
 Front-R+/Slide	 Shift + Right
 Front-R-	 Shift + Left
 Center+/3D/S	 CH+ / Page+
 Center-	 CH- / Page-
 Page+/Subwfr+	 Shift + CH+ / Page+





Original	Replacement
Power DVD	Power
Power Audio	Shift + Power
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Menu	Menu / Home
Top Menu/STB	D.Menu / Top
On Screen	Picture / Format
Up	Up
Down	Down

Original	Replacement
Right	Right
Left	Left
Enter	OK
fs/Rate/Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Set Up	Setup / OPT /
DVD/HDD/Title/Gr	Blue / Prime Video / Random
Zoom/→	Zoom / Size
←	Back / Return
VFP/Progressive	Smart / List
Angle	Info / Angle
EX/Es/Return	Shift + Back / Return
Cancel	Exit / Cancel / Clear
DVD Card/Rec	Rec / Rec Mode
1	1
2	2
3	3





Original	Replacement
Power Audio	Power
FM/AM	TV/Radio /
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
I<</Tuning-	I<< / Preset-
Play/FM Mode	Play / Slow
>>I/Tuning+	>>I / Preset+
Stop/Memory	Stop / Hold
Up/TA7News/Inf	Up
Down/PTY	Down
Right/PTY+	Right
Left/PTY-	Left
On	Picture / Format
Smart Surround Setup	Smart / List
1 FM/AM	1
2 FM/AM	2

Original	Replacement
3 FM/AM	3
4 FM/AM	4
5 FM/AM	5
6 FM/AM	6
7 FM/AM	7
8 FM/AM	8
9 FM/AM	9
10 FM/AM	0
+10 FM/AM	Fav / Marker / PC
EX/ES/Return	Back / Return
Display/Dimmer	Display / Media
Decode	Shift + 2
EQ Freq	Shift + 3
Bass Boost	Shift + 4
C.Tone	Shift + 5
EQ Level+	Shift + 6
Midnight	Shift + 7



