 











 



 



 


 


 
 
 



 

























 

 



 







Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Mute	 Mute / Dimmer	 9	 9
 []/[+]	 TV/Radio /	 0	 0
 Input	 AV / Input / RDS	 -/--	 Guide / EPG / -/--
 [=]	 Text / Goto	 C	 Fav / Marker / PC
 [X]/[o]	 Zoom / Size	 Red	 Red / Netflix / Search
 [◆]	 Picture / Format	 Green	 Green / APP / Repeat
 [?]/[i+]	 Subtitle / EQ	 Yellow	 Yellow / YouTube / Repeat
 ↔>	 Smart / List	 Blue	 Blue / Prime Video / Random
 []/[=i]	 Display / Media	 Menu	 Menu / Home
 1	 1	 +	 Up
 2	 2	 -	 Down
 3	 3	 →←	 OK
 4	 4	 +	 Vol+
 5	 5	 -	 Vol-
 6	 6	 [L]+	 CH+ / Page+
 7	 7	 [R]-	 CH- / Page-



