








 

 

 

 



 





	Original	Replacement		Original	Replacement
	Power		Power		
AUX	AUX		7		
1	1		1		
2	2		2		
3	3		3		
4	4		4		
5	5		5		
6	6		6		
	Vol+		Vol+		
	Vol-		Vol-		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	I<<		I<< / Preset-		
	>>I		>>I / Preset+		

