



Original	Replacement	Original	Replacement
	Power		Power
	Power Tv	+	Shift + Power
	Vol+ Tv		Vol+
	CH+ Tv	+	Shift + CH+ /
	Drive Select		Display / Media
	AV Input Tv	+	Shift + AV / Input / RDS
	Vol- Tv		Vol-
	CH- Tv	+	Shift + CH- /
	1		1
	2		2
	3		3
	CH/Page+		CH+ / Page+
	4		4
	5		5
	6		6
	CH/Page-		CH- / Page-
	7		7
	8		8
	9		9
	Internet		Smart / List
	Last View		Fav / Marker / PC
	0		0
	Radio/Tv		TV/Radio /
	Skipe	+	Shift + Smart / List
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow/Search/Rewi		<< / Tune-
	Slow/search >>		>> / Tune+
	Stop		Stop / Hold
	Pause/PAUSE LIVE		Pause / Step / Freeze
	Play		Play / Slow
	i/STATUS		Info / Angle
	X/EXIT		Exit / Cancel / Clear
	Guide		Guide / EPG / -/-





Original	Replacement
Pop-Up menu/Direct	D.Menu / Top
Left	Left
Up	Up
OK	OK
Right	Right
Function Menu	Menu / Home
Option	Setup / OPT /
Down	Down
Return	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Text	Text / Goto
STTL	Subtitle / EQ

Original	Replacement
Prog/Check	Shift + TV/Radio / Program
Chapter	Zoom / Size
Time Slip	Picture / Format
Audio	Audio / Lang I/II
Input Select	AV / Input / RDS
DEL	Sleep / Timer
Manual Skip -10s	Shift + Left
Manual Skip +60s	Shift + Right

