

 




 






 

 

 
















Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep / Timer
	iPod		Green / APP / Repeat
	AUX		Red / Netflix / Search
	AM		Yellow / YouTube / Repeat
	FM		Blue / Prime Video / Random
	I<<		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Vol+		Vol+
	Vol-		Vol-
	((.))		Smart / List
	Mute		Mute / Dimmer
	▲		Up
	▼		Down
	Select		OK

Original	Replacement	Original	Replacement
	Menu		Menu / Home

