




























 







Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 SAT	 Shift + 0
 SAT	 AV / Input / RDS
 TV/Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ

Original	Replacement
 Text	 Text / Goto
 Live	 Display / Media
 VOD	 Smart / List
 Series	 Shift + Display / Media
 WEB TV	 Shift + Smart / List
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 EPG	 Guide / EPG / -/--
 Down	 Down
 Info	 Info / Angle
 Vol+	 Vol+
 Fav	 Fav / Marker / PC
 Page+	 CH+ / Page+



