 

 

 

 

 



 





 



 











 

 

 

 





 

 

 

 

 

 

 



 









 
 




 


 

 

 

 

 

 

Original	Replacement
	 Power
	 1
	 2
	 3
	 Green / APP / Repeat
	 Blue / Prime Video / Random
	 TV/Radio /
	 Sleep / Timer
	 Shift + Sleep / Timer
	 Display / Media
	 Guide / EPG / -/--
	 Pause / Step / Freeze
	 Mute / Dimmer
	 Vol-
	 Vol+
	 Play / Slow
	 Stop / Hold

Original	Replacement
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 AV / Input / RDS
	 Picture / Format
	 Zoom / Size
	 Down
	 Up
	 CH- / Page-
	 CH+ / Page+
	 Left
	 Right







 



 



















 





 

Original	Replacement
	 Power
	 Sleep / Timer
	 Shift + Sleep / Timer
	 Guide / EPG / -/-
	 Pause / Step / Freeze
	 Mute / Dimmer
	 Vol-
	 Vol+
	 Play / Slow
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 AV / Input / RDS
	 Picture / Format
	 Zoom / Size



 

 

 

 

 

 

 

 

Original	Replacement
	 Down
	 Up
	 CH- / Page-
	 CH+ / Page+
	 Left
	 Right





 

 




 




 









 

 



 

 

 

 



 
 
 







 

Original	Replacement
	 Green / APP / Repeat
	 Power
	 Blue / Prime Video / Random
	 TV/Radio /
	 Sleep / Timer
	 Shift + Sleep / Timer
	 Display / Media
	 Pause / Step / Freeze
	 Mute / Dimmer
	 Vol-
	 Vol+
	 Play / Slow
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+

Original	Replacement
	 AV / Input / RDS
	 Picture / Format
	 Zoom / Size
	 Down
	 Up
	 CH- / Page-
	 CH+ / Page+
	 Left
	 Right





Original	Replacement
	 Power
	 +  Shift + Power
	 7
	 TV/Radio /
	 Sleep / Timer
	 +  Shift + Sleep / Timer
	 Display / Media
	 Mute / Dimmer
	 Vol-
	 Vol+
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 AV / Input / RDS
	 Picture / Format
	 Sound / Title

Original	Replacement
	 Down
	 Up
	 CH- / Page-
	 CH+ / Page+
	 Left
	 Right

