



Original		Replacement		Original		Replacement	
	Operate		Power		Prog+		CH+ / Page+
	Correct		Back / Return		Vol+ Tv		Vol+
	Eject		Eject / Surround		Prog+ Tv		Shift + CH+ /
	Enter		OK		0		0
	Trans AUX		Setup / OPT /		Prog-		CH- / Page-
	1		1		Vol- Tv		Vol-
	2		2		Prog- Tv		Shift + CH- /
	3		3		Menu		Menu / Home
	4		4		Disp		Display / Media
	5		5		Index		Smart / List
	6		6		SP/LP		Picture / Format
	VCR/TV		TV/Radio /		Count Clock		Yellow / YouTube / Repeat
	Power Tv		Shift + Power		0000		Exit / Cancel / Clear
	Mute Tv		Mute / Dimmer		I> Slow		Red / Netflix / Search
	7		7		Rec		Rec / Rec Mode
	8		8		Up		Up
	9		9		CH 1/2		Green / APP / Repeat





	Original	Replacement	Original	Replacement
	A.Dub	Text / Goto		
	V.Dub	AV / Input / RDS		
	--	Guide / EPG / -/--		
	Down	Down		
	Tracking Up	Right		
	Tracking Down	Left		
	Play	Play / Slow		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Stop	Stop / Hold		
	Pause	Pause / Step / Freeze		
	Blue / Prime Video / Random	Blue / Prime Video / Random		
	REV	I<< / Preset-		
	FWD	>>I / Preset+		






Original	Replacement	Original	Replacement
Operate	Power	Prog-	CH- / Page-
Correct	Back / Return	Menu	Menu / Home
Eject	Eject / Surround	Disp	Display / Media
Enter	OK	Index	Smart / List
Trans AUX	Setup / OPT /	SP/LP	Picture / Format
1	1	Count Clock	Yellow / YouTube / Repeat
2	2	0	0
3	3	I> Slow	Red / Netflix / Search
4	4	Rec	Rec / Rec Mode
5	5	Up	Up
6	6	CH 1/2	Green / APP / Repeat
VCR/TV	TV/Radio /	A.Dub	Text / Goto
7	7	V.Dub	AV / Input / RDS
8	8	--	Guide / EPG / -/-
9	9	Down	Down
Prog+	CH+ / Page+	Tracking Up	Right
0000	Exit / Cancel / Clear	Tracking Down	Left





Original		Replacement		Original	Replacement
	Play		Play / Slow		
	<<		<< / Tune-		
	>>		>> / Tune+		
	Stop		Stop / Hold		
	Pause		Pause / Step / Freeze		
	II>		Blue / Prime Video / Random		
	REV		I<< / Preset-		
	FWD		>>I / Preset+		

