

 

 



 







 













 

















Original	Replacement
	 Power
	 Shift + Power
	 Smart / List
	 Display / Media
	 Info / Angle
	 Up
	 Down
	 Left
	 Right
	 OK
	 Shift + Zoom /
	 Picture / Format
	 Sound / Title
	 Setup / OPT /
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat

Original	Replacement
	 Fav / Marker / PC
	 AV / Input / RDS
	 Mute / Dimmer
	 CH+ / Page+
	 CH- / Page-
	 Vol+
	 Vol-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0


























Original	Replacement
 C	 +  Shift + Setup / OPT / Tools
 -/--/ID All	 Guide / EPG / -/--
 [+]/Aspect	 +  Shift + Picture / Format
 Surround	 Eject / Surround
 Off Timer	 Exit / Cancel / Clear
 Multi PIP	 D.Menu / Top
 Swap	 Back / Return
 Select	 +  Shift + OK
 Zoom/Movie	 Zoom / Size

Original	Replacement





Original	Replacement	Replacement
On		Power
N		Smart / List
R		Display / Media
[+]		Info / Angle
Off	 + 	Shift + Power
■		OK
Up		Up
Down		Down
Right		Right
Left		Left
Input 1		Red / Netflix / Search
Input 2		Green / APP / Repeat
Input 3		Yellow / YouTube / Repeat
PC		Fav / Marker / PC
Input		AV / Input / RDS
Mute		Mute / Dimmer
CH+		CH+ / Page+

Original	Replacement	Replacement
CH-		CH- / Page-
Vol+		Vol+
Vol-		Vol-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
[]/Picture		Picture / Format
J/Sound		Sound / Title
Set Up		Setup / OPT /
Pos Size		Text / Goto





Original	Replacement	
[+]/Aspect	 +  Shift + Picture / Format	
Surround	 Eject / Surround	
Off Timer	 Exit / Cancel / Clear	
Multi PIP	 Zoom / Size	
Swap	 Back / Return	
Zoom/Movie	 TV/Radio /	

Original	Replacement

