






























Original	Replacement	Original	Replacement
8	 8	8	8
Chan.Down	 CH- / Page-	Chan.Down	CH- / Page-
1	 1	1	1
2	 2	2	2
3	 3	3	3
4	 4	4	4
5	 5	5	5
6	 6	6	6
7	 7	7	7
Volume-	 Vol-	Volume-	Vol-
9	 9	9	9
Guide -/-- 1.	 Guide / EPG / -/--	Guide -/-- 1.	Guide / EPG / -/--
0/10	 0	0/10	0
2.Fav P/C 2.	 Fav / Marker / PC	2.Fav P/C 2.	Fav / Marker / PC
Red	 Red / Netflix / Search	Red	Red / Netflix / Search
Green	 Green / APP / Repeat	Green	Green / APP / Repeat
Yellow	 Yellow / YouTube / Repeat	Yellow	Yellow / YouTube / Repeat

Original	Replacement	Original	Replacement
Blue	 Blue / Prime Video / Random	Blue	Blue / Prime Video / Random
Display	 Display / Media	Display	Display / Media
Mute	 Mute / Dimmer	Mute	Mute / Dimmer
Txt Stop	 Stop / Hold	Txt Stop	Stop / Hold
Info	 Info / Angle	Info	Info / Angle
Return TV	 TV/Radio /	Return TV	TV/Radio /
Text	 Text / Goto	Text	Text / Goto
TV/AV	 AV / Input / RDS	TV/AV	AV / Input / RDS
Menu	 Menu / Home	Menu	Menu / Home
Menu Up	 Up	Menu Up	Up
On/Off	 Power	On/Off	Power
Menu Left	 Left	Menu Left	Left
OK Enter	 OK	OK Enter	OK
Menu Right	 Right	Menu Right	Right
Menu Off	 Exit / Cancel / Clear	Menu Off	Exit / Cancel / Clear
Menu Down	 Down	Menu Down	Down
Back	 Back / Return	Back	Back / Return



Original	Replacement	Original	Replacement
Volume+			Vol+
Chan.Up			CH+ / Page+

