



Original	Replacement	Original	Replacement
Power	Power	-/--	Guide / EPG / -/--
SET	Fav / Marker / PC	Prog+	CH+ / Page+
Wide	Zoom / Size	Prog-	CH- / Page-
Hi-Speed REW	Shift + << /	Vol+	Vol+
Counter Remain	Red / Netflix / Search	Vol-	Vol-
TV/Video	TV/Radio /	Play	Play / Slow
Eject	Eject / Surround	Stop	Stop / Hold
1	1	Pause	Pause / Step / Freeze
2	2	FF	>> / Tune+
3	3	Index Search >>I	>>I / Preset+
4	4	I<< Index Search	I<< / Preset-
5	5	REW	<< / Tune-
6	6	Skip	Exit / Cancel / Clear
7	7	Wheel >	Shift + >>I / Preset+
8	8	Up	Up
9	9	< Wheel	Shift + I<< / Preset-
0	0	Down	Down





Original

Replacement

	Right		Right
	Left		Left
	Menu		Menu / Home
	Execute		OK
	Input Select		AV / Input / RDS
	Audio Monitor		Audio / Lang I/II
	Timer Clear		Sleep / Timer
	TrackingAuto/Man u (VHS)		Smart / List
	Tracking ▼		Shift + CH- /
	Display		Display / Media
	Tracking ▲		Shift + CH+ /
	Counter Reset		Green / APP / Repeat
	Rec		Rec / Rec Mode
	Tape Speed SP/LP (VHS)		Setup / OPT /
	Showview		Picture / Format

Original

Replacement





Original	Replacement
Power	Power
Wide	Zoom / Size
Display	Display / Media
TV/Video	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide / EPG / -/--
Vol+	Vol+
Vol-	Vol-

Original	Replacement
Prog+	CH+ / Page+
Prog-	CH- / Page-
Audio Monitor	Audio / Lang I/II
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[≡]	Text / Goto
Smart	Smart / List

