

 





























 


















 

 






Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Smart Tv	 Smart / List
 0	 0
 Guide	 Guide / EPG / -/--
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up

Original	Replacement
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Info	 Info / Angle
 P+	 CH+ / Page+
 Vol-	 Vol-
 Option	 Setup / OPT /
 P-	 CH- / Page-
 TV	 TV/Radio /
 Audio	 Audio / Lang I/II
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 List	 Shift + Smart / List





Original		Replacement		Original		Replacement	
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	PRE-CH		Fav / Marker / PC				
	<<		<< / Tune-				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

