


Original	Replacement	Original	Replacement
	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Guide / EPG / -/--
	0		0
	Prev.		I<< / Preset-
	PC		Shift + Fav / Marker / PC
	DTV		Shift + 2
	AV		Shift + 3

Original	Replacement	Original	Replacement
	TV		Shift + 1
	Still		Pause / Step / Freeze
	Favor		Fav / Marker / PC
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	Display		Display / Media
	Red / P.Mode		Picture / Format
	Red / P.Mode		Red / Netflix / Search
	Green / S.Mode		Shift + Sound / Title
	Green / S.Mode		Green / APP / Repeat
	Yellow / S.Effect		Sound / Title
	Yellow / S.Effect		Yellow / YouTube / Repeat
	Blue / Stereo		Audio / Lang I/II
	Blue / Stereo		Blue / Prime Video / Random
	Up / CH+		Up
	Up / CH+		CH+ / Page+

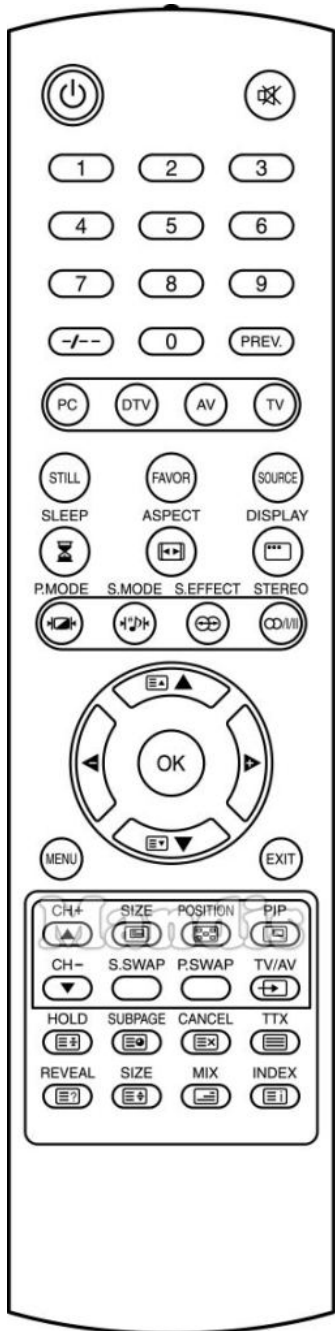



Original	Replacement	Original	Replacement
			
Left / Vol-	Left	Hold	Stop / Hold
			
Left / Vol-	Vol-	Subpage	Subtitle / EQ
			
OK	OK	Cancel	Shift + Exit / Cancel / Clear
			
Right / Vol+	Vol+	TTX	Text / Goto
			
Right / Vol+	Right	Reveal	D.Menu / Top
			
Menu	Menu / Home	Size	Zoom / Size
			
Down / CH-	Down	Mix	Shift + Text /
			
Down / CH-	CH- / Page-	Index	Info / Angle
			
Exit	Exit / Cancel / Clear		
			
PIP CH+	Shift + CH+ /		
			
PIP Size	Shift + Red / Netflix /		
			
PIP Position	Shift + Green / APP /		
			
PIP	Smart / List		
			
PIP CH-	Shift + CH- /		
			
PIP S.Swap	Shift + Blue / Prime		
			
PIP P.Swap	Shift + Yellow / YouTube /		
			
PIP TV/AV	Shift + AV / Input / RDS		

