







































 

 

 

 

 

 



 

 





 









| Original | Replacement |
|--|--|
|  Power |  Power |
|  Timer |  Sleep / Timer |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  -/-- |  Guide / EPG / -/-- |
|  0 |  0 |
|  Recall |  Back / Return |
|  PM |  Smart / List |
|  Info |  Info / Angle |

| Original | Replacement |
|---|--|
|  Input |  AV / Input / RDS |
|  Audio |  Audio / Lang I/II |
|  Up / CH+ |  CH+ / Page+ |
|  Up / CH+ |  Up |
|  Left / Vol- |  Vol- |
|  Left / Vol- |  Left |
|  Menu |  Menu / Home |
|  Right / Vol+ / Enter |  Right |
|  Right / Vol+ / Enter |  Vol+ |
|  Right / Vol+ / Enter |  OK |
|  [+] |  >> / Tune+ |
|  Down / CH- |  CH- / Page- |
|  Down / CH- |  Down |
|  =>1 |  >> / Preset+ |
|  [-] |  << / Tune- |
|  1<= |  I<< / Preset- |
|  Red / EPG |  Red / Netflix / Search |



