






 

 

 
 

 

 


 









Original	Replacement	Original	Replacement
 Power	 Power	 >>	 >>  / Preset+
 Eject	 Eject / Surround	 Stop	 Stop / Hold
 Vol+	 Vol+	 Info	 Info / Angle
 Function	 Menu / Home	 Repeat	 Green / APP / Repeat
 Preset/Folder+	 CH+ / Page+	 Sleep	 Sleep / Timer
 Vol-	 Vol-	 Clock	 Shift + Sleep / Timer
 Mute	 Mute / Dimmer	 Alarm	 OK
 Preset/Folder-	 CH- / Page-	 RDS/SET	 Setup / OPT /
 Program/Memor	 Display / Media	 USB REC	 Rec / Rec Mode
 Auto Dj	 Zoom / Size	 EQ/Region	 Subtitle / EQ
 Delete	 Exit / Cancel / Clear	 PTY	 Smart / List
 Sound Effect	 Sound / Title		
 I<<	 I<< / Preset-		
 Tun-	 << / Tune-		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Tun+	 >> / Tune+		

