








 


 






 





















Original	Replacement	Original	Replacement
	POWER		Power
	MUTE		Mute / Dimmer
	P. MODE		Picture / Format
	S. MODE		Sound / Title
	TV / RADIO		TV/Radio /
	NICAM		Shift + Audio / Lang I/II
	DISPLAY		Display / Media
	ZOOM / PC.A		Shift + Zoom /
	SLEEP		Sleep / Timer
	EDIT		Shift + Text /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	BACK		Back / Return
	REC. MENU		D.Menu / Top
	PLAY / PAUSE		Play / Slow
	SKIP PREV		I<< / Preset-
	SKIP NEXT		>>I / Preset+
	REC		Rec / Rec Mode
	STOP		Stop / Hold
	REW		<< / Tune-
	FWD		>> / Tune+
	CH+		CH+ / Page+
	SOURCE		AV / Input / RDS
	VOL+		Vol+
	CH-		CH- / Page-





Original	Replacement
VOL-	Vol-
MENU	Menu / Home
EXIT	Exit / Cancel / Clear
UP	Up
LEFT	Left
OK	OK
RIGHT	Right
DOWN	Down
FAV	Fav / Marker / PC
EPG	Guide / EPG / -/--
USB	Shift + 8
SETUP / ON/OFF	Setup / OPT /
MIX / MENU	Smart / List
INDEX / PCB	Text / Goto
ZOOM / SIZE	Zoom / Size
REVEAL / SUBT. / REP.	Shift + Green / APP /
SUB. T.	Subtitle / EQ

Original	Replacement
UPDATE / A-B	Shift + Yellow / YouTube /
SUBPAGE /	Audio / Lang I/II
HOLD / FRE. / SUB. T.	Shift + Stop /
RED / INFO	Shift + Info / Angle
RED / INFO	Red / Netflix / Search
Green / Angle	Info / Angle
Green / Angle	Green / APP / Repeat
YELLOW / SLOW	Yellow / YouTube / Repeat
BLUE / EJECT	Blue / Prime Video / Random
EJECT	Eject / Surround

