





















 










 


















 











Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 Lang	 Audio / Lang I/II
 [=].	 Subtitle / EQ
 *1	 Picture / Format
 Text	 Text / Goto
 Google Play	 Shift + Green / APP / REPEAT
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 i	 Info / Angle

Original	Replacement
 Left	 Left
 OK	 OK
 Right	 Right
 EXIT	 Exit / Cancel / Clear
 Down	 Down
 ←	 Back / Return
 V+	 Vol+
 P+	 CH+ / Page+
 V-	 Vol-
 P-	 CH- / Page-
 1 / @	 1
 2 / ABC	 2
 3 / DEF	 3
 4 / GHI	 4
 5 / JKL	 5
 6 / MNO	 6
 7 / PQRS	 7



