































Original		Replacement		Original		Replacement	
	Power		Power		Right		Right
	Mute		Mute / Dimmer		OK		OK
	Shuffle		Blue / Prime Video / Random		Esc		Exit / Cancel / Clear
	[/]		>> / Preset+		Snap Shot		Smart / List
	1		1		CH+		CH+ / Page+
	2		2		CH-		CH- / Page-
	3		3		Vol+		Vol+
	4		4		Vol-		Vol-
	5		5		Pause/Step		Pause / Step / Freeze
	6		6		Record		Rec / Rec Mode
	7		7		Stop		Stop / Hold
	8		8				
	9		9				
	0		0				
	Up		Up				
	Down		Down				
	Left		Left				

