

 





 

 





 

 





 

 







 

 



 

 





 

 

 

 

 

 

 

 










 






 



 
 



 


 

 
 

 




Original	Replacement	Original	Replacement
	Power		Power
	Power Tv		Shift + Power
	Tv/AV Tv		Shift + AV / Input / RDS
	Vol+ Tv		Shift + Vol+
	DVD		Shift + 2
	FM		TV/Radio /
	EXT-IN		AV / Input / RDS
	Vol- Tv		Shift + Vol-
	1		1
	2		2
	3		3
	Select >		CH+ / Page+
	4		4
	5		5
	6		6
	< Select		CH- / Page-
	7		7
	8		8
	9		9
	Vol+		Vol+
	Cancel		Exit / Cancel / Clear
	0		0
	+10		Guide / EPG / -/-
	Vol-		Vol-
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Quick OSD		Red / Netflix / Search
	[ I ] VS		Green / APP / Repeat
	One Touch Play		Fav / Marker / PC





Original	Replacement	Original	Replacement
 Top Menu/Direct Navigator	 D.Menu / Top	 Zoom	 Zoom / Size
 Up	 Up	 Manual Skip	 Yellow / YouTube / Repeat
 Functions	 Smart / List	 Page/Angle	 Shift + Setup / OPT / Tools
 <II/Left	 Left	 Subtitle	 Subtitle / EQ
 Enter	 OK	 Setup	 Setup / OPT /
 Right/II>	 Right	 Sleep	 Sleep / Timer
 Menu/Play List	 Menu / Home	 FL.Display	 Display / Media
 Down	 Down	 Muting	 Mute / Dimmer
 Return	 Back / Return		
 Level/Subwoofe	 Sound / Title		
 EQ	 Shift + Subtitle / EQ		
 H.Bass	 Info / Angle		
 Group	 Picture / Format		
 Audio	 Audio / Lang I/II		
 Repeat	 Shift + Green / APP /		
 Play Mode	 Text / Goto		
 Quick Replay	 Blue / Prime Video / Random		

