






















Original	Replacement
 FL Dimmer	 Mute / Dimmer
 On / Standby	 Power
 Setup	 Setup / OPT /
 Display	 Display / Media
 Zoom	 Zoom / Size
 3D	 Shift + 3
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 T / Search	 Red / Netflix / Search
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Clear	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 REV	 << / Tune-
 Play	 Play / Slow
 FWD	 >> / Tune+
 Pause / Step	 Pause / Step / Freeze





	Original	Replacement		Original	Replacement
	I<< Skip	 I<< / Preset-			
	Stop	 Stop / Hold			
	Skip >>I	 >>I / Preset+			
	Slow	 +  Shift + Play /			
	Random	 Blue / Prime Video / Random			
	Memory	 Smart / List			
	Repeat	 Green / APP / Repeat			
	A-B RPT	 Yellow / YouTube / Repeat			

	Original	Replacement		Original	Replacement

