



Original		Replacement		Original		Replacement	
	Power		Power		Page-		CH- / Page-
	Mute		Mute / Dimmer		1		1
	Pause		Pause / Step / Freeze		2		2
	Menu		Menu / Home		3		3
	Scan		Smart / List		4		4
	Up		Up		5		5
	Info		Info / Angle		6		6
	Left		Left		7		7
	OK		OK		8		8
	Right		Right		9		9
	Exit		Exit / Cancel / Clear		0		0
	Down		Down		Red/FAV		Red / Netflix / Search
	Recall		Fav / Marker / PC		Green/SAT		Green / APP / Repeat
	Vol+		Vol+		Yellow/Audio		Yellow / YouTube / Repeat
	MP		Display / Media		Blue/Tv/Radio		Blue / Prime Video / Random
	Page+		CH+ / Page+				
	Vol-		Vol-				

