



Original	Replacement	Original	Replacement
 Power	 Power	 Page-	 CH- / Page-
 Mute	 Mute / Dimmer	 1	 1
 Pause	 Pause / Step / Freeze	 2	 2
 Menu	 Menu / Home	 3	 3
 Scan	 Smart / List	 4	 4
 Up	 Up	 5	 5
 Info	 Info / Angle	 6	 6
 Left	 Left	 7	 7
 OK	 OK	 8	 8
 Right	 Right	 9	 9
 Exit	 Exit / Cancel / Clear	 0	 0
 Down	 Down	 Red/FAV	 Red / Netflix / Search
 Recall	 Fav / Marker / PC	 Green/SAT	 Green / APP / Repeat
 Vol+	 Vol+	 Yellow/Audio	 Yellow / YouTube / Repeat
 MP	 Display / Media	 Blue/Tv/Radio	 Blue / Prime Video / Random
 Page+	 CH+ / Page+		
 Vol-	 Vol-		

