







 



















 




 






 





























Original	Replacement	Original	Replacement
 Power	 Power	 <<	 << / Tune-
 Setup	 Setup / OPT /	 Down	 Down
 Open/Close	 Eject / Surround	 >>	 >> / Tune+
 Title	 Sound / Title	 I<<	 I<< / Preset-
 PBC/Menu	 Menu / Home	 Slow	 AV / Input / RDS
 Goto	 Shift + Goto / Text /	 Pause	 Pause / Step / Freeze
 Display	 Display / Media	 >>I	 >>I / Preset+
 Mute	 Mute / Dimmer	 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ	 Prog	 TV/Radio /
 Audio	 Audio / Lang I/II	 Bookmark	 Green / APP / Repeat
 Angle	 Info / Angle	 Return	 Back / Return
 Play	 Play / Slow	 1	 1
 Up	 Up	 2	 2
 Stop	 Stop / Hold	 3	 3
 Left	 Left	 C	 Yellow / YouTube / Repeat
 Enter	 OK	 4	 4
 Right	 Right	 5	 5



