



Original	Replacement	Original	Replacement
On	Power	Stop	Stop / Hold
Standby	Shift + Power	Mute	Mute / Dimmer
Home	Shift + Menu /	HDMI Link	Smart / List
Blank	Display / Media	Volume-	Vol-
HDMI 1	1	Volume+	Vol+
HDMI 2	2	Lens	TV/Radio /
P-in-P/Swap	3	Color Mode	Setup / OPT /
PC	Fav / Marker / PC	Image Enh	Sleep / Timer
LAN	5	Up	Up
Wireless HD	6	Left	Left
<<	<< / Tune-	Enter	OK
Play	Play / Slow	Right	Right
>>	>> / Tune+	Default	Back / Return
I<<	I<< / Preset-	Down	Down
Pause	Pause / Step / Freeze	Esc	Exit / Cancel / Clear
>>I	>>I / Preset+	Menu	Menu / Home
Link Menu	D.Menu / Top	Memory	Red / Netflix / Search





Original		Replacement			
	Lens 1		Green / APP / Repeat		
	Lens 2		Yellow / YouTube / Repeat		
	Frame Int		Blue / Prime Video / Random		
	RGBCMY		Text / Goto		
	Pattern		Subtitle / EQ		
	User		Info / Angle		
	3D Format		Picture / Format		
	Aspect		Zoom / Size		
	Power Tv		Shift + OK		
	Output Tv		Shift + AV / Input / RDS		
	Input Tv		AV / Input / RDS		

