



Original	Replacement	Original	Replacement
 Power	 Power	 Dev.List	 Display / Media
 Mute	 Mute / Dimmer	 EPG	 Guide / EPG / -/-
 1	 1	 Subtitle	 Subtitle / EQ
 2	 2	 Text	 Text / Goto
 3	 3	 Auto	 Setup / OPT /
 Lang	 Audio / Lang I/II	 Menu	 Menu / Home
 4	 4	 Zoom	 Zoom / Size
 5	 5	 Info	 Info / Angle
 6	 6	 Exit	 Exit / Cancel / Clear
 Time Shift	 D.Menu / Top	 Up	 Up
 7	 7	 CH+ / Page+	 CH+ / Page+
 8	 8	 Left	 Left
 9	 9	 Vol-	 Vol-
 Tv/Radio	 TV/Radio /	 OK	 OK
 FAV	 Fav / Marker / PC	 Right	 Right
 0	 0	 Vol+	 Vol+
 Recall	 Back / Return	 CH- / Page-	 CH- / Page-





Original		Replacement		Original		Replacement	
	Down		Down				
	Filelist		Smart / List				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	<<		<< / Tune-				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Red/FAV/Daily		Red / Netflix / Search				
	Green/DEL/Weekl		Green / APP / Repeat				
	Yellow/Movie/P.Inf		Yellow / YouTube / Repeat				
	Blue/Look/Timer		Blue / Prime Video / Random				

