







 













 

 

 











Original	Replacement	Original	Replacement
	Power		Power
	Goto		Text / Goto
	Source		AV / Input / RDS
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide / EPG / -/--
	Step		Shift + Pause / Step /
	Subtitle		Subtitle / EQ

Original	Replacement	Original	Replacement
	Angle		Info / Angle
	Audio		Audio / Lang I/II
	PBC		Fav / Marker / PC
	Title		Sound / Title
	Up		Up
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Left		Left
	Enter		OK
	Right		Right
	Slow		Shift + Play /
	Setup		Setup / OPT /
	Down		Down
	Zoom		Zoom / Size
	Menu		Menu / Home
	Repeat		Green / APP / Repeat





	Original	Replacement		Original	Replacement
	A-B	REPEAT A-B Yellow / YouTube / Repeat			
	I<<	PRESET- I<< / Preset-			
	>>I	PRESET+ >>I / Preset+			
	Program	PROGRAM TV/RADIO TV/Radio /			
	Display	MEDIA DISPLAY Display / Media			
	<<	TUNE- << / Tune-			
	>>	TUNE+ >> / Tune+			

