







 
































Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 Game	 Display / Media
 Auto	 Smart / List
 Info	 Info / Angle

Original	Replacement
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Vol-	 Vol-
 Up	 Up
 CH+	 CH+ / Page+
 Right	 Right
 Vol+	 Vol+
 OK	 OK
 CH-	 CH- / Page-
 Down	 Down
 Red	 Red / Netflix / Search
 Zoom	 Zoom / Size
 Green	 Green / APP / Repeat
 Lan/Audio	 Audio / Lang I/II
 Yellow	 Yellow / YouTube / Repeat





Original	Replacement	Original	Replacement
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		
 Tv/Radio	 TV/Radio /		
 Blue	 Blue / Prime Video / Random		
 Text	 Text / Goto		
 >>	 >> / Tune+		
 Subtitle	 Subtitle / EQ		

