





 















Original	Replacement
	Mute / Dimmer
	Shift + Pause / Step /
	Audio / Lang I/II
	Power
	Smart / List
	Sleep / Timer
	Picture / Format
	Display / Media
	1
	2
	3
	4
	5
	6
	7
	8
	9

Original	Replacement
	AV / Input / RDS
	0
	Back / Return
	Setup / OPT /
	Sound / Title
	Up
	CH+ / Page+
	Vol-
	Left
	Menu / Home
	OK
	Right
	Vol+
	CH- / Page-
	Down
	Text / Goto
	Subtitle / EQ





Original	Replacement	Original	Replacement
 [ / = ]	 TV/Radio /		
 << / [ ... ]	 << / Tune-		
 >> / [ ? ]	 >> / Tune+		
 [ X ]	 Fav / Marker / PC		
 Red / ↑	 Red / Netflix / Search		
 Green / ←	 Green / APP / Repeat		
 Yellow / →	 Yellow / YouTube / Repeat		
 Blue / Enter / H.Lock	 Blue / Prime Video / Random		
 White / ↓ / CH.List	 Guide / EPG / -/--		
 Pause / Timer	 Pause / Step / Freeze		
 [ ◆ ] / Zoom	 Zoom / Size		
 Exit	 Exit / Cancel / Clear		

Original	Replacement	Original	Replacement

