





 

 








 







 

 
 








	Original	Replacement		Original	Replacement
	Power		Power		
	Bluetooth / AUX		7		
	Bluetooth / AUX		9		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	Vol+		Vol+		
	Play / Pause		Play / Slow		
	Play / Pause		Pause / Step / Freeze		
	Vol-		Vol-		
	I<<		I<< / Preset-		
	>>I		>>I / Preset+		
	Dislike		CH- / Page-		
	Like		CH+ / Page+		

